



LINTEC OF AMERICA, INC.

# INTRODUCING E-3000ZC

FROM LINTEC OF AMERICA

## Polyester Window Film For Latex Printers



Create **bold impact** with **stunning visual prints** on **optically clear PET film** optimized for **printing with latex ink**

**64.2%**

### Visible Light Transmission

Our outstanding topcoating clarity is designed specifically for latex ink compatibility.

**-10°F to +275°F**


### Service Temperature Range

Latex-compatible adhesive films are resilient and designed to last many years.

**0%**

### PVC

PVC-free films are a less toxic, responsible choice for people and the environment.

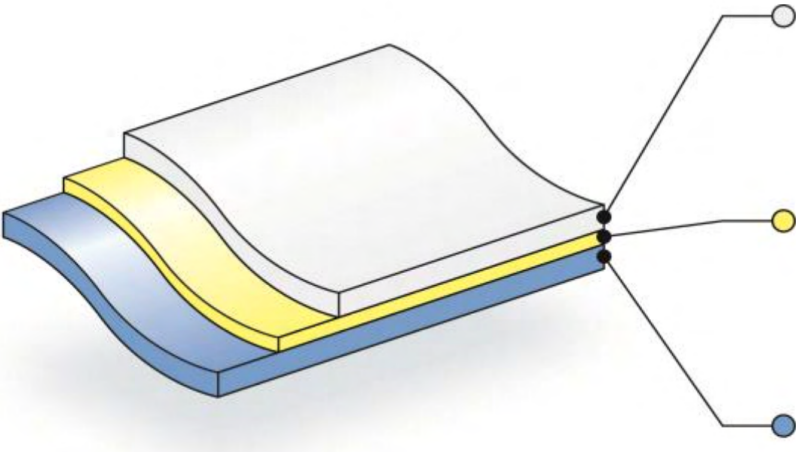

### Facestock


- 2 mil optically clear film.
- Excellent dimensional stability.
- Resistance to elevated temperatures.

### Adhesive

- Ultra-clear permanent acrylic adhesive.
- Chemical, humidity & temp resistance.
- Wet apply.

### Adhesive

- 2 mil clear polyester release liner.
- Ensures adhesive smoothness.
- Preserves optical clarity.

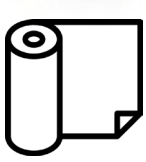

WIDTH **61 inches**

LENGTH **Up to 150 feet**

## Lamination Recommended! Protect Delicate Latex Prints!

LINTEC overlaminates come in a variety of styles and thicknesses.

- **Standard:** 1 mil gloss PET overlaminate. Ideal for most indoor applications.
- **Protect Outdoor:** 1.5 mil clear gloss fluoropolymer (cast vinyl) film. Optimized for long-term outdoor applications.
- **Protect Gloss:** 2 mil gloss PET overlaminate. Scratch-resistant!
- **Protect Satin:** 2 mil satin PET overlaminate. Satin finish is anti-graffiti & anti-glare.
- **Heavy Duty:** 4 mil gloss PET overlaminate for added protection on heavy-duty applications.



## Get the Most From Your Latex Graphic

### TOOLS OF THE TRADE

- Application solution in spray bottle
- Squeegee
- Edge guide tool
- Trimming knife
- Pressure sensitive tape
- Razor scraper
- Paper towel

### INSTALLATION

1. Clean the glass.
2. Mist the window with application fluid.
3. Float the film into place.
4. Mist with application fluid again.
5. Squeegee from the center out.
6. Trim edges with care.

**No application fluid?** In a pinch, you can mix 3-5 drops of dish soap or baby shampoo into a 32 oz. spray bottle full of warm distilled water!

### TIPS & TRICKS

- Try latex graphics for backlit projects! They're great for a faux-stained-glass look.
- Adhesion takes a half hour to reach basic strength, 24 hours for full strength.
- Clean periodically using a soap and water solution.
- Never use harsh chemicals or cleaning agents (such as Windex), which can delaminate the adhesive!
- To remove the film, peel from a top corner at an acute angle, close to the glass, and do not jerk or tug.
- Concerned about scuffs? Scratch-resistant film coatings are *underneath* the ink of your latex print job. Add an overlaminate!